MILESCRAFT®

Always the Better Idea.

BasePlate/BushingSet™


1261 라우터 가이드 부싱

사용설명서




TutnLock 베이스 판 조립 및 센터링

1

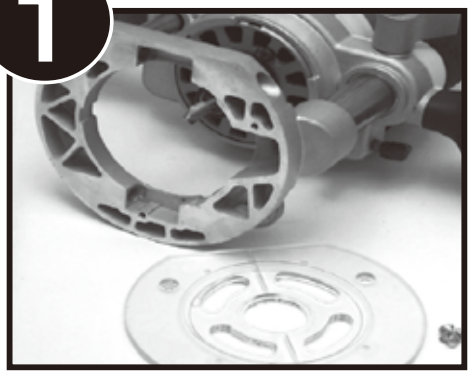

라우터에서 기존 베이스 판을 제거하십시오

2

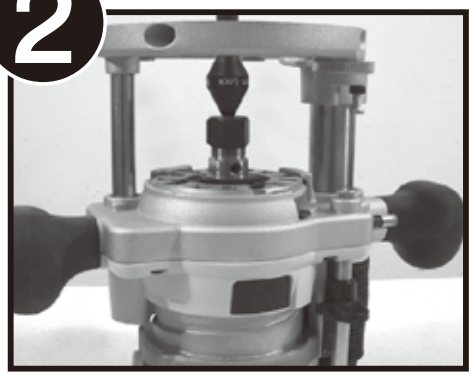


센터링 핀을 라우터 콜렛트에 삽입하십시오

3



TurnLock 부싱을
베이스 판 중앙의 구멍으로 비틀어
베이스 판에 설치하십시오

4

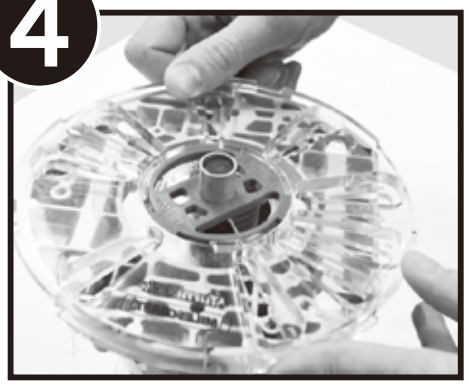

베이스 판을 라우터 상단에 놓습니다.

TutnLock 베이스 판 조립 및 센터링

5



베이스 판을 센터링 핀과 만나도록
아래로 내린 후 베이스 판을 라우터의
나사 구멍에 회전시켜 베이스 판을
라우터에 정확하게 고정시킵니다.

6




1단계에서 제거한 나사를 사용하거나
키트에 제공된 나사를 사용하여
베이스 판을 라우터에
느슨하게 고정하십시오

7



필요에 따라 베이스 판을 조정하여
TurnLock 부싱을 센터링 핀에 맞춥니다.

8

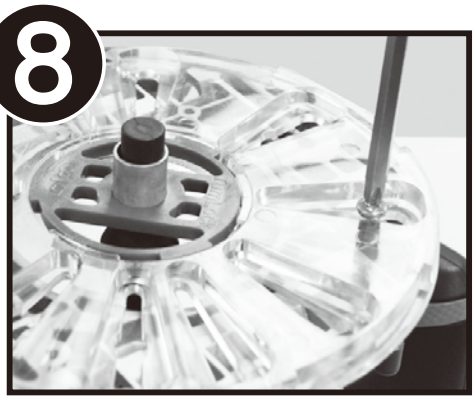

중앙에 놓이면 나사를 조여
베이스 판을 제자리에 고정하십시오.


TutnLock 베이스 판 조립 및 센터링

9



TurnLock 부싱을
TurnLock 매커니즘에서 약간 비틀어
베이스 판에서 제거하십시오.


10

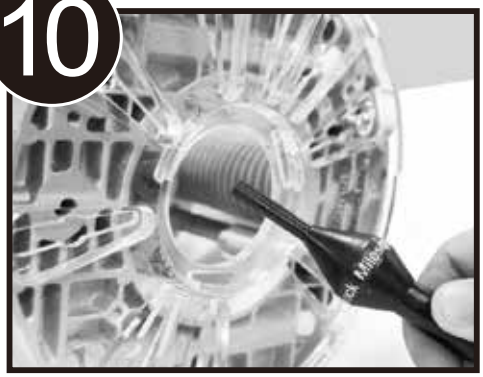

라우터 콜렛트에서 센터링 핀을 분리합니다.

TurnLock 라우터 베이스 판이 설치되고 중앙에 위치합니다.
원하는 부싱을 사용하십시오

베이스 판 & 부싱 세트 Parts

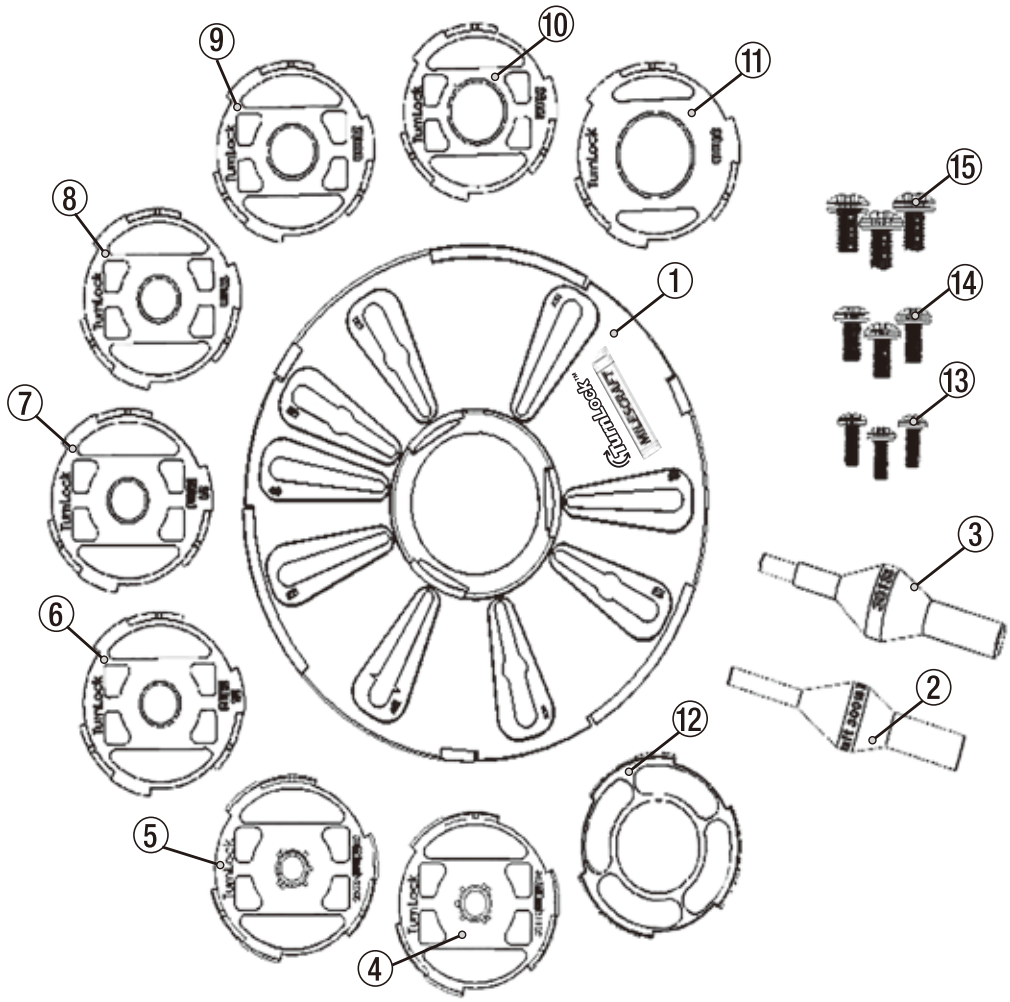

TurnLock™

	Part #	Description	Qty
1	30681	TurnLock™ Base Plate	1
2	30018	1/4" & 1/2" Centering Pin	1
3	30133	Centering Pin 6mm x 8mm x 12mm	1
4	30118	11.11mm Long Metal Nose Bushing	1
5	30224	11.11mm Short Metal Nose Bushing	1
6	30114	15.9mm Long Metal Nose Bushing	1
7	30226	15.9mm Short Metal Nose Bushing	1
8	36079	17mm Metal Nose Bushing	1
9	36080	20mm Metal Nose Bushing	1
10	36081	24mm Metal Bose Bushing	1
11	36082	30mm Metal Nose Bushing	1
12	30050	Top Hat Adaptor Bushing	1
13	40001	4mm x 10mm #2 Phillips Screw	3
14	40003	5mm x 10mm #2 Phillips Screw	3
15	40005	6mm x 10mm #2 Phillips Screw	3

No. 1261 : 베이스 판 + 부싱 세트
No. 1266 : 부싱세트